

Module 2: W600 x D300 x H300 mm



i) 9321396 - With Wooden Shelf



ii) 9321422 - With Glass Shelf

PROFILE & CONNECTORS



A



B



C

- A - Basic Profile
- B - Glass Profile
- C - Wood Profile
- D - 3 Way 3d Connector
- F - Wall mount set




D



F

STEP 1

Make top & bottom part of the cube by connecting cube profiles with connectors required as per design

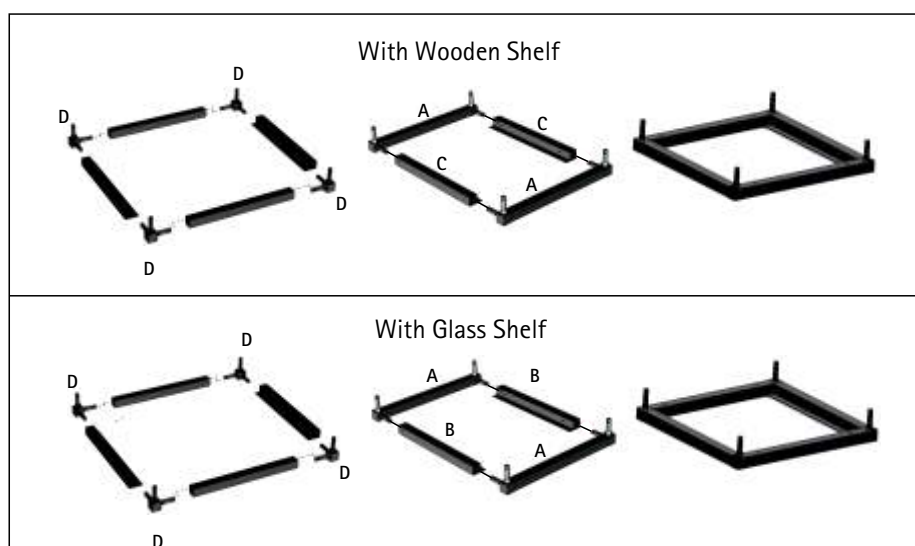

STEP 2

Insert screw at all position in diagonally opposite pattern


Note:

- ▶ Screw should be kept loose at this step
- ▶ Flatness should be maintained, it should not wobble.



STEP 3

Insert vertical profile between
Top and Bottom part

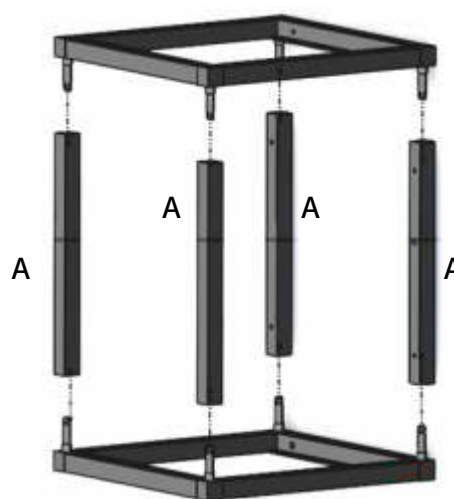


STEP 4

Insert screw at all position & tight all the screw present
in cube in diagonally opposite pattern and put the cover
caps for concealing the screws.



Note:


- ▶ Screw should not be over tightened
- ▶ Screw should be kept little loose to maintain
flatness & should be fitted in diagonally opposite pattern
- ▶ Flatness should be maintained, it should not wobble

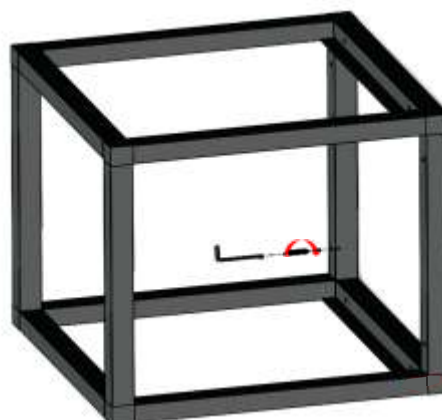

STEP 5

- ▶ Drill on wall as per drilling dimension given
- ▶ Fix Wall Mounting Bracket using Wall screw & Plug
- ▶ Hang the structure on brackets & do height adjustment if required

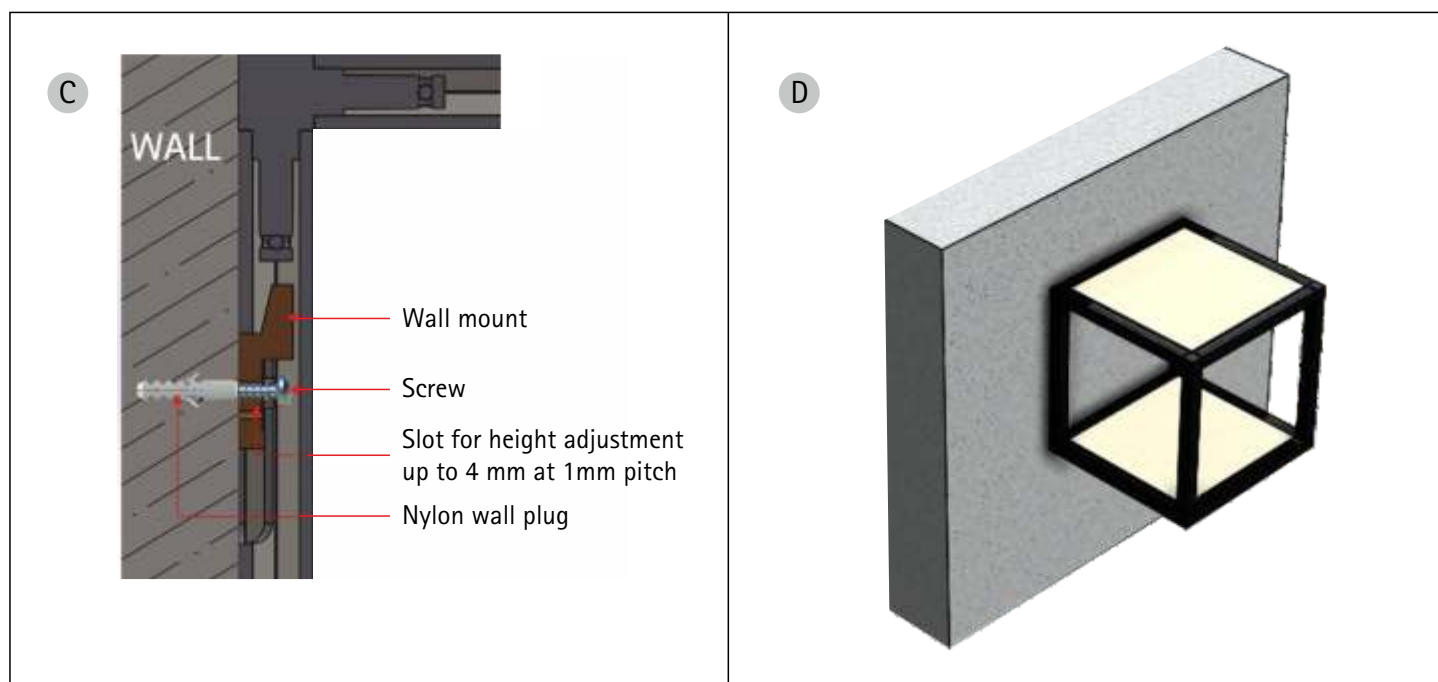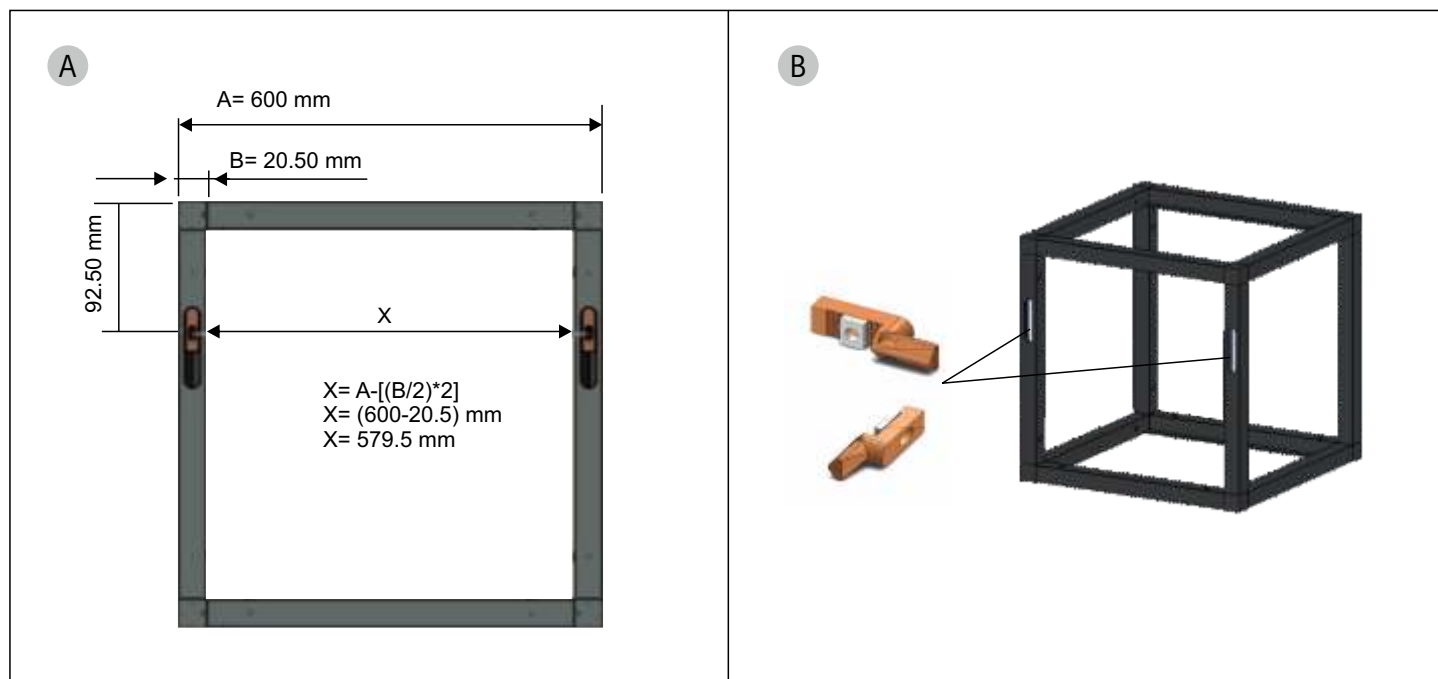

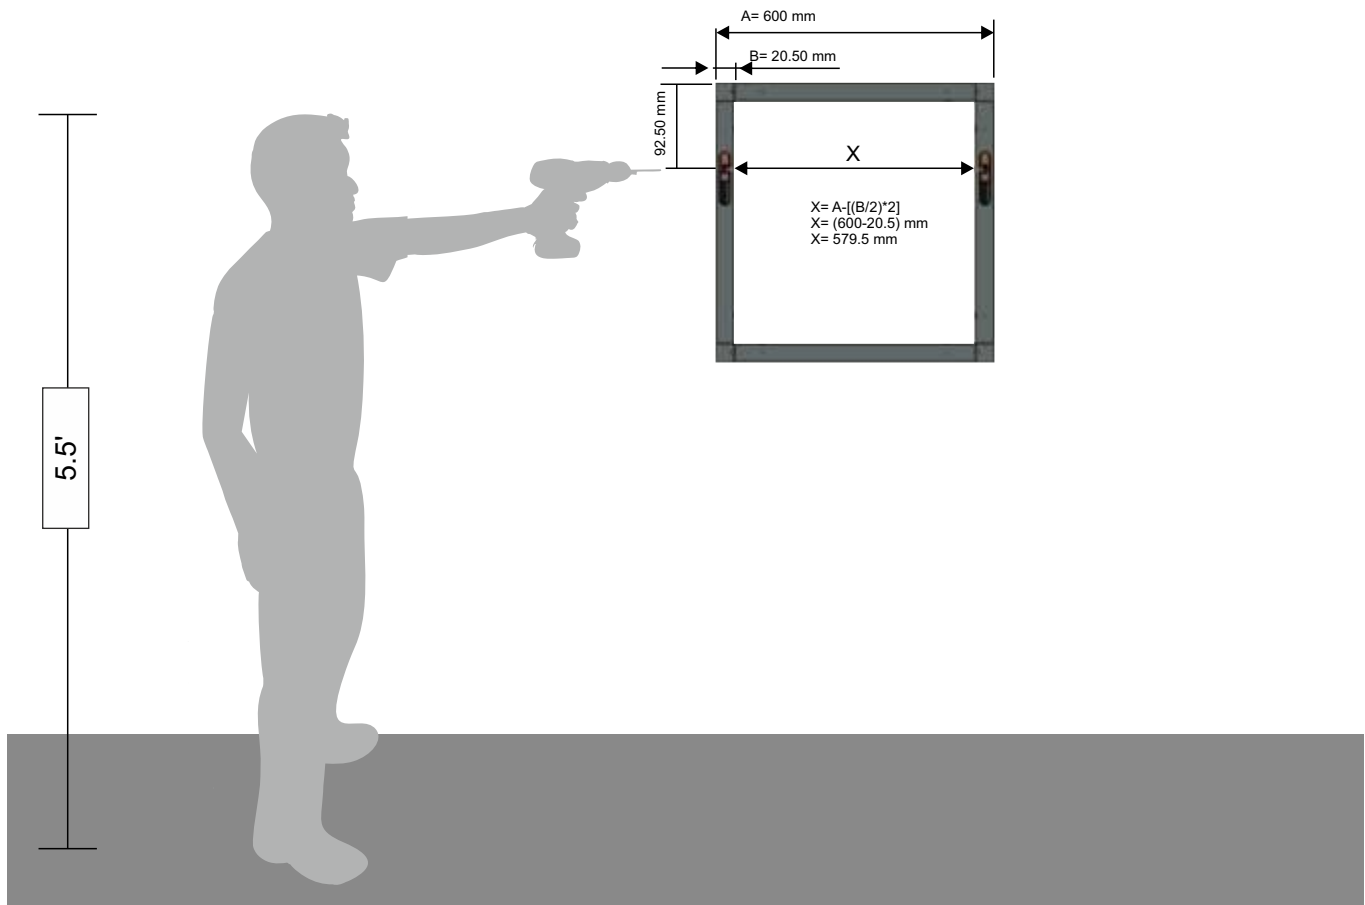

Maximum weight capacity

